

GAUGING PLUG

Mod. 101,101L,140,135,1500,1505



APPLICATION

It is a device in accordance with Directive 2014/34/EU and the harmonised standard. Gauging plug Ridart are produced in different variants: threaded, quick, lockable and in different sizes.

CHEMICAL SUITABILITY

- Standard model is for traditional fuel without additives.

- "SS" model is for aggressive solvents, acids or bases.

good	
⟨Ex⟩ 2 G	

CE

	GAUGING PLUG 5X15 mm						
MOD.	CODE	DESCRIPTION	BODY GASKET		DN1 (+DN2)	Α	
1500	092306	Gauging Plug	BRASS	ELASTOPAL	1"F + 1"1/2F BSPP	120	
1505	1505-01	Automatic gauging plug for padlock (cap 1"1/2 R) For dipsticks 5x15 mm	BRASS	VITON®	1"1/2 R	100	
1505	1505-03	Sleeve mod. 1505-01	BRASS	-	1"1/2 + 1" BSPP	105	
1505	1505-04	Sleeve mod. 1505-01	BRASS	-	2" + 1" BSPP	102	
134	134-01	Gauging plug with chain	STAINLESS STEEL	PTFE®	1" F BSPP	55	


Mod. 1500

A

DN2



Mod. 1505-03

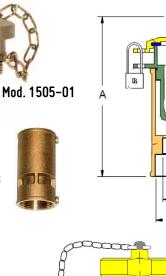

Mod. 1505-04






-DN1 -

Mod 1505

RIDART s.r.l. via Adua, 17 – 21045 Gazzada Schianno (VA) ITALY P.IVA/C.F. IT 01454770122 www.ridart.it info@ridart.it +39 0332 463301 Product Certification, Declaration of Conformity, User Manual and Testing on: www.ridart.it/support The Data and Images are not binding. We reserve the right to make changes without notice. Pressure & Flow Tolerances ±20%.

GAUGING PLUG 12X12 mm THREADED


L						
MOD.	CODICE	DESCRIZIONE	CORPO	GUARNIZIONE	DN1 (+DN2)	Α
135	092300	Gauging plug with chain (cap 1"1/2 R)	BRASS	NBR	1"F BSPP	70
135	092301	Gauging plug with chian (cap 1"1/2 R)	BRASS	NBR	1"F + 1"1/2F BSPP	95
1500	092305	Gauging plug (France)	BRASS	ELASTOPAL	1"F + 1"1/2F BSPP	120
140	086155	Gauging plug with chian (cap 1"1/2 R)	BRASS	NBR	3"f	85

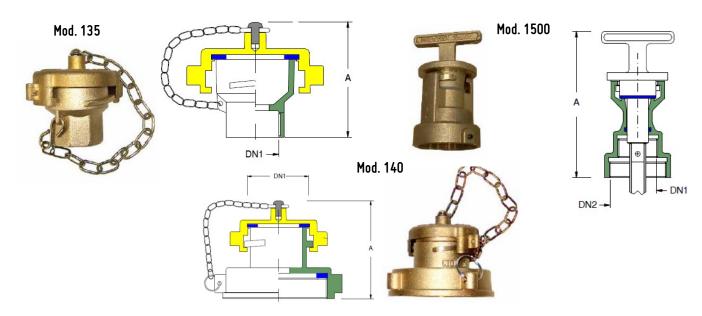

GAUGING PLUG 12X12 mm QUICK ADAPTER

MOD.	CODE	DESCRIPTION	BODY	GASKET	DN1	Α
101	086150	Quick cap with chain (cap 1"1/2 R)	BRASS	NBR	3" R	118
101	086160	Quick cap with chain (cap 1"1/2 R)	BRASS	NBR	4" R	120
101 L	092322	Quick cap with gauging plug for padlock with chain (cap 1"1/2 R)	BRASS	NBR	3" R	118



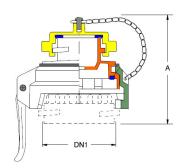





INSTALLATION

- For correct installation follow the Directives and product User Manual.
- Contact our technical department for custom application or maintenance by email to: **quality@ridart.it**.
- Product Certification, Declaration of Conformity and User Manuals are available on: **www.ridart.it/support.**

MAINTENANCE

- Periodically check the device is necessary to remove possible dirty.
- Always replace the product after fire or deflagration.
- In case of tampering warranty expires and safety protection is not guaranteed.